

Water Fill Station - Instructions for Use

All Users

Water will be dispensed at a rate of \$3.90 per KL (1KL = 1,000 litres)

**Please note that a \$5.00 minimum fee applies to all credit card transactions*

Instructions

1. Before operation, ensure both outlet valves or taps on the filling station are closed.
2. Connect 25mm or 50mm outlet hose to your vehicle's inlet or container.
3. Scroll **[UP (+)]** or **[DOWN (-)]** buttons on the front panel of the water filling station, for the desired amount of water.

NOTE: The minimum amount of water selection is 1,428 litres (equivalent to \$5.00). Selecting this amount will allow you to dispense from 1 litre up to 1,428 litres.

4. Press **[ENTER]** to confirm maximum amount of water you wish to dispense.
5. **a) Credit/Debit Cards** – Tap, swipe or insert card to yellow card services machine.
b) Account Card Holders – Tap card to yellow card services machine
6. Once approved, press **[ENTER]** to confirm and open valve or tap connected to your vehicle or container.
7. Only press **[FINISH]** when all containers or your tank is full. To swap between containers or tanks while dispensing, close the valve or tap and reopen when hose is in new position.
8. Once your container(s) or tank is full, press **[FINISH]**.
9. Close the valve or tap fully to avoid excess charges.
10. Disconnect hose and check surroundings before exiting the station area.

Please note: The machine does not dispense a manual receipt. Charges will appear on your bank statement as "Paymate* GRC Water"

For enquiries or to report a problem, please call Goondiwindi Regional Council on (07) 4671 7400.

Further information: www.grc.qld.gov.au